



高能产品使用说明书

Operation Manual

使用前请认真阅读此说明书并请妥善保管

Go through and keep it carefully

无线TTL高速同步闪光

Little Tiger



高能摄影器材有限公司

Shenzhen Gaoneng Photographic Equipment Co., Ltd.



深圳市高能摄影器材有限公司
Shenzhen Gaoneng Photographic Equipment Co.,Ltd.

地址:深圳市布吉镇秀峰工业城A3栋

Add:A3 Building.xiufeng Industrial Park. Buji Town, Shenzhen


Tel:0086-755-28559656

Fax:0086-755-84175011

<http://www.cononmk.com>

Email:queok@163.com

部件名称

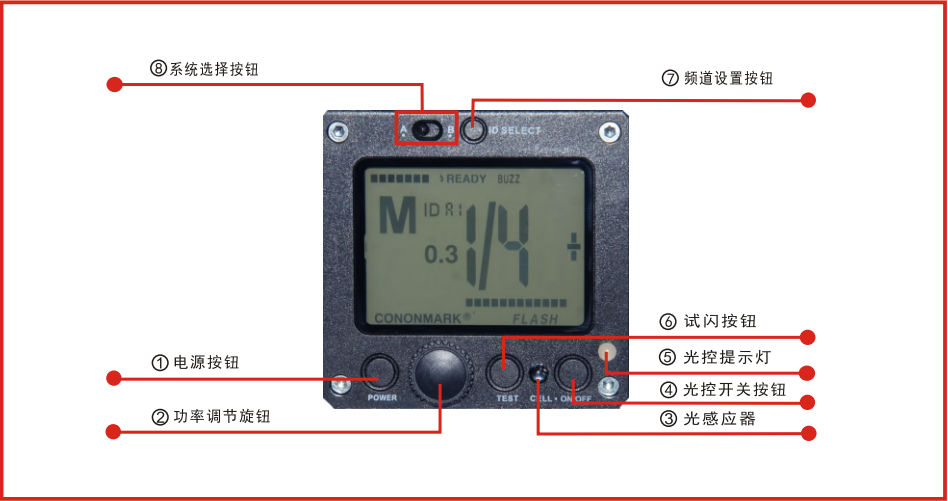


使用说明

- ① 电源按钮：开启或关闭电源。
- ② 功率调节旋钮: 转动旋钮,调节功率输出大小：1/1-1/64。
- ③ 光感应器：受外界光感应而自动发光的光敏同步感应器。
- ④ 光控开关按钮：开启或关闭光控能力。
- ⑤ 光控提示灯：提示光控工作状态。
- ⑥ 试闪按钮：闪光是否正常工作，按此按钮进行试闪。
- ⑦ 频道设置按钮：设置所需频道（CH"1、2、3……9 "）。
- ⑧ 系统选择按钮：灯体内置两套系统：A系统、B系统。



Parts

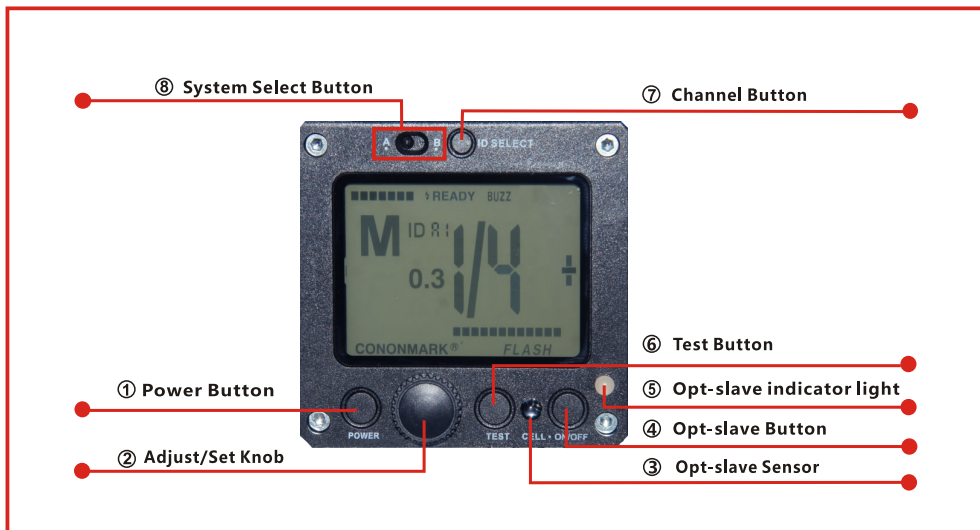

Instruction

- ① **Power Button:** Press this button to turn on/off the light.
- ② **Adjust/Set Knob:** Switch the knob to adjust the output power, from 1/1-1/64.
- ③ **Opt-slave Sensor:** Optical slave sensor, automatic triggered by other light
- ④ **Opt-slave Button:** Press this button to turn on/off the opt-slave function.
- ⑤ **Opt-slave indicator light:** Indicate the status of Opt-slave function.
- ⑥ **Test Button:** Press this button to test if the light flashing or not.
- ⑦ **Channel Button:** Press this button to choose the desired channel.
- ⑧ **System Select Button:** 2 system built-in, System A and System B.

